

NMEA 2000 Configuration Tool for the NGW-1 and NGT-1

Configure your Actisense NMEA 2000 devices and turn flexibility into precision.

The Actisense NMEA 2000 configuration tool allows you complete control of the interaction between the NMEA 2000 network and Actisense NMEA 2000 devices.

An additional feature enables the remote configuration of Actisense devices on the NMEA 2000 bus. Without having to disconnect the device for configuration, simply connect an additional NGT-1 to the bus. All configurations available with the Config Tool* are accessible remotely. This feature is not available with NMEA Reader.

NGW-1

The NGW-1 makes it possible to convert NMEA 0183 data into NMEA 2000 data and vice-versa.



NGT-1

The NGT-1 precisely transfers messages to and from the NMEA 2000 bus and a PC. (Compatible software required).

Configuration Option	NGW	NGT	NMEA Reader	Config Tool*
Change baud rate	YES	YES	YES	NO
Change NMEA 2000 PGN Rx list	YES	YES	YES	NO
Change NMEA 2000 PGN Tx list	YES	YES	YES	NO
Change NMEA 2000 PGN Tx rate	NO	NO	NO	NO
Change NMEA 2000 PGN Rx rate	NO	NO	NO	NO
Select which compatible NMEA 2000 PGN's / NMEA 0183 sentences are linked	NO	N/A	NO	NO
Choose priority based on data source	NO	N/A	NO	NO
Choose priority based on 'CANName'	NO	N/A	NO	NO

*Currently unavailable.